


Timing Light is not Flashing

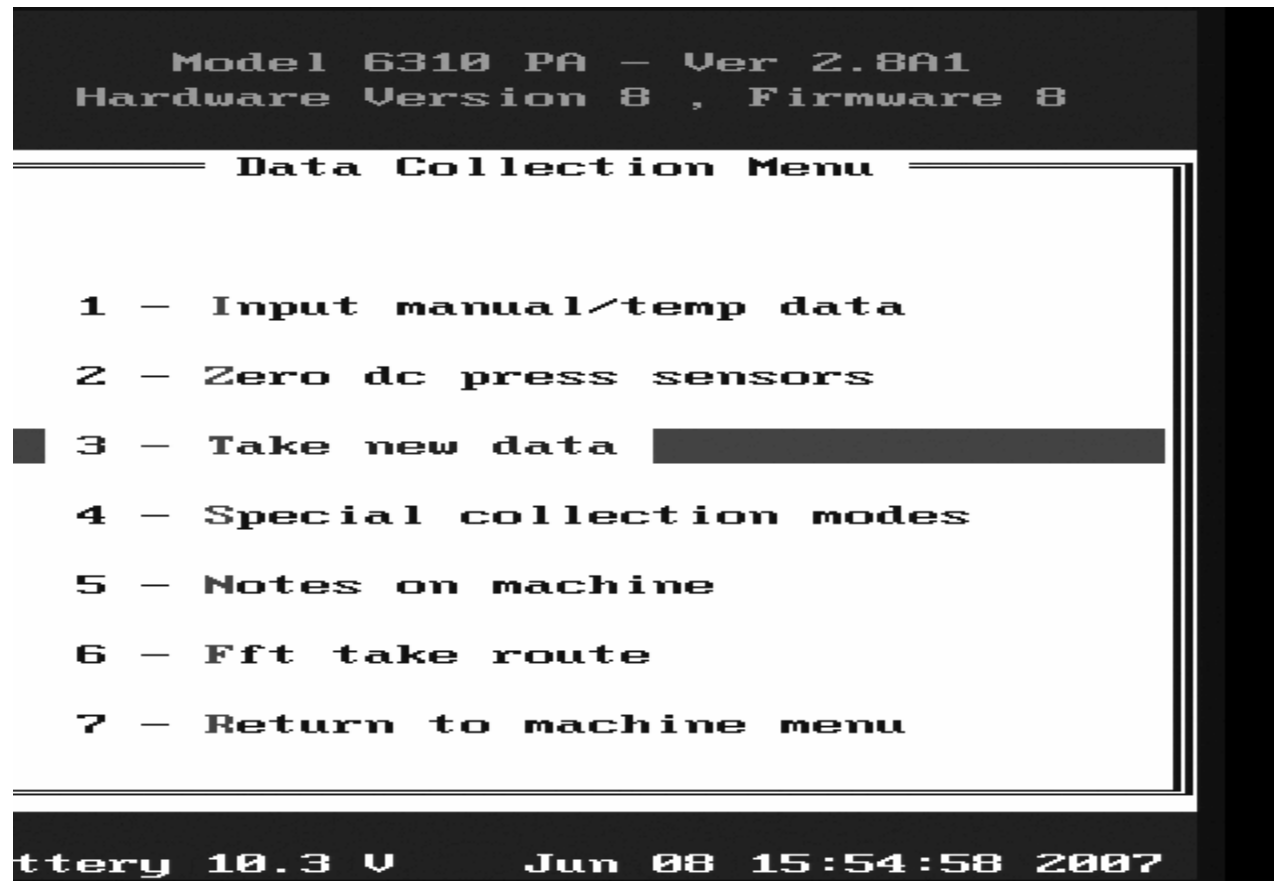

Mode 1 - When using the wireless transmitter, the transmitter battery is supplying power to the encoder and timing light.

Mode 2 - When using the encoder cable direct to the 6310, the 6310 battery is supplying power to the encoder and timing light. In this Mode, you must first enter the “3 – Take new data” menu to apply the power to channel 5 (ENC) for the timing light to work. Following the first entry to “Take new data”, as long as you do not remove the encoder cable, you can go to any menu.