


903.3 MHz Wireless Transmitter Starting in Once Per Turn Mode

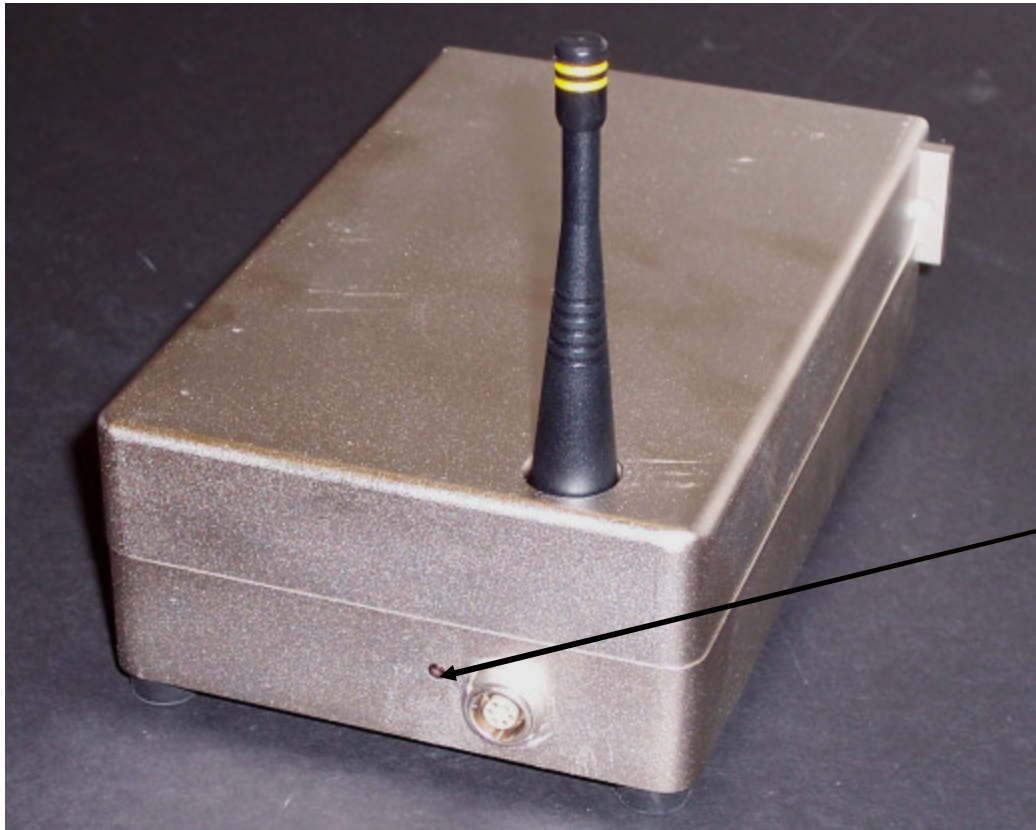

- When using the wireless transmitter in conjunction with the shaft encoder (360 PPR)
- The proper procedure is:
 - Connect the encoder to the rotational motion first
 - Connect the encoder cable between the encoder and transmitter
 - This should be in 360 PPR mode and the LED on the transmitter will be a bright OPT flash
- If a different procedure is used, the wireless transmitter may start in the 1 pulse per revolution mode and give RPM errors and the LED will be a very dim flash. To correct (reset) this, disconnect the encoder cable from the transmitter and reconnect.